



Owner's Manual Supplement

www.seafoxboats.com

SEA FOX BOAT'S DISCLAIMER

The following Owner's Manual is provided for information and educational purposes only and is not intended to offer or provide legal advice or create a contractual relationship between Sea Fox Boat Company and the owner of any Sea Fox brand vessel. Please beware that as a vessel owner you have non-delegable responsibilities regarding the safety, maintenance, fitness, and operation of your vessel and the extent of such responsibilities is ultimately determined by Federal law and regulations, the general maritime law of the United States, the laws and regulations of the states and territories of the United States, or the laws and regulations of the country where you operate your vessel. To fully understand your responsibilities as a vessel owner, and before operating or letting any third-party operate your vessel, we recommend that you consult the services of a qualified lawyer in admiralty and maritime law.



. 19

TABLE OF CONTENTS

Introduction	Electrical Schematics
Specifications	Switch Panel – Twin Battery
Designated Occupant Seating4	Switch Panel - Triple Battery
Safety Decals5	Switch Panel – STBD
Plumbing Schematics	Switch Panel – PORT
Fuel System – Gas7	DC Breaker Panel
Fuel System – Diesel	Deck Harness - STBD
Bilge System	Deck Harness – PORT
Fresh Water System – Deck	Hull Harness
Fresh Water System – Hull11	Console Harness
Raw Water System	Hardtop Harness – Forward
Drains – Forward	Hardtop Harness – Aft
Drains – Aft	Hardtop Harness – STBD
Deck Plumbing15	Hardtop Panel – STBD
Waste System	Hardtop Panel – PORT
Air Conditioning17	Powered Anchor Light Panel
Reverso	Awning (Optional)
	Table Switch Panel
	A /O D

Battery - Triple Engine with 4 House Battery Setup. 45



This Page Intentionally Left Blank



INTRODUCTION

Congratulations and Welcome Aboard! With so many boat brands to choose from, we want to congratulate you on your decision to choose Sea Fox Boats. For more than 24 years, Sea Fox offers the finest hand-crafted saltwater boats carefully balanced with the build-quality, features, styling and performance for the fairest price. Our passion for boating is evident in every model we make and we appreciate that you've noticed the Sea Fox difference.

We share your love for the moments spent on the water with friends and family, which is why every Sea Fox boat offers a unique blend of fishing/family options, technologies and innovative features. Your choice of a Sea Fox affirms that you have performed your research and compared the value of your model with the competition.

Whether you are new to the boating lifestyle or an old salt, we ask that **you and all other operators** read the owner's manual, this supplement, and all other literature provided with the boat **before** operating the boat or any equipment. We also recommend that all operators enroll in a boating safety course available online - see References and Contact Information in this section for education resources online.

This supplement contains model-specific information not included with the owner's manual. This manual is not intended to be a replacement for specific product literature provided by engine, accessory or other major equipment manufacturers, but rather to supplement that information.

Because of our philosophy of continuous product improvement, this manual serves as a general guide only, so the specifications and illustrations used may not match the equipment on your boat and are intended only as general reference views.

We welcome you to the Sea Fox family and wish you many years of boating enjoyment!

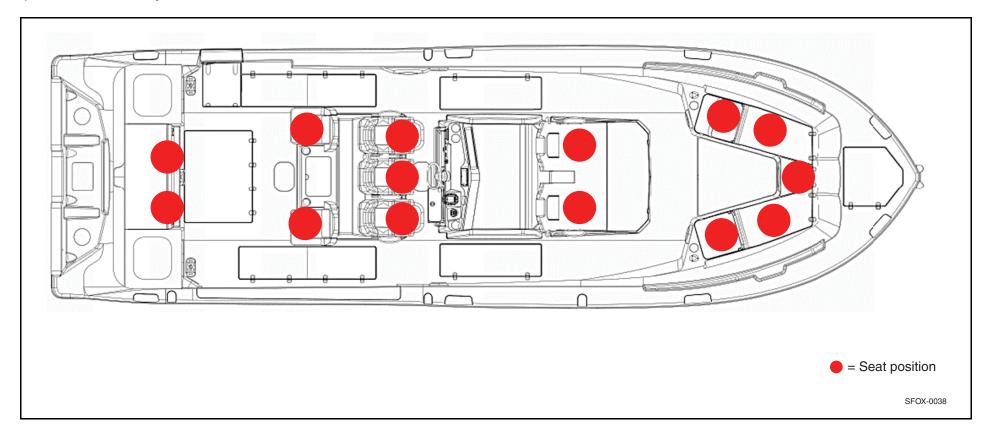
SPECIFICATIONS

Max. Weight Capacity	Yacht Certification				
Persons	Yacht Certification				
Persons Weight	Yacht Certification				
Max. HP	1200 hp (895 kW)				
L.O.A.	36' (10.97 m)				
Beam	11' (3.35 m)				
Draft	27.5" (0.70 m)				
Height, Keel to Top (Light Folded)	136" (3.45 m)				
Height, Keel to Top (w/Outriggers)	142" (3.61 m)				
Height, Keel to Top (w/Radar)	155" (3.94 m)				
Bridge Clearance Hard Top	127.5" (3.24 m)				
Max. Weight Boat (w/ Fluids, Largest HP, Batteries & Gear)	17,152 lbs (7,780 kg)				
Fuel Tank Capacity (Gasoline)	370 gal (1,401 L)				
Fuel Tank Capacity (Diesel)	10 gal (38 L)				
Freshwater Tank Capacity	21 gal (79 L)				
Holding Tank Capacity	12 gal (45 L)				




DESIGNATED OCCUPANT SEATING

Be sure all passengers are properly seated in designated seating positions and not riding on the bow, bow pulpit, deck, gunwale or rear sun deck while underway. Passengers must use hand-holds and use caution when riding in the bow. Move to the aft passenger seats during rough water operation or if visibility is restricted.





SAFETY DECALS

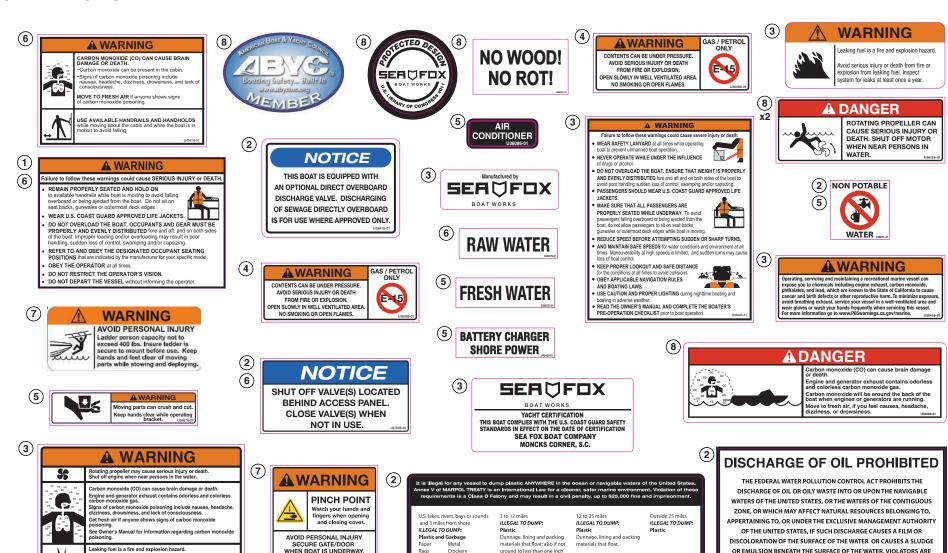

180178 368 Command Decal Kit Rev 8

SUBJECT TO SUBSTANTIAL CIVIL PENALTIES AND/OR CRIMINAL

SANCTIONS INCLUDING FINES AND IMPRISONMENT.

Avoid serious injury or death from fire or explosion from leaking fuel. Inspect system for leaks at least once a year.

SEA FOX BOAT COMPANY
MEETS U.S. EPA EVAP STANDARDS USING CERTIFIED COMPO

Paper

Rags

Crockery

of all garbage into the Great Lakes or their connecting or tributary waters is prohibited.

Metal

Food

Dunnage

Food

TO DECK PRIOR TO USING

IF EQUIPPED.

SER UFOX

BOAT WORKS

1= COCKPIT FRONT

2= HEAD COMPARTMENT

3= CONSOLE

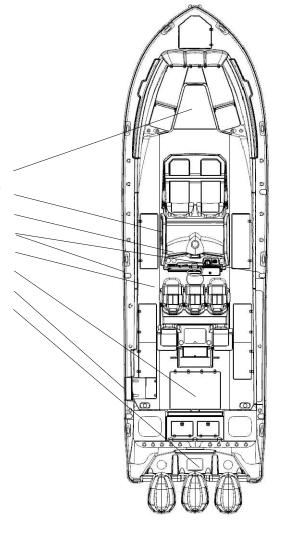
4= FUEL FILL

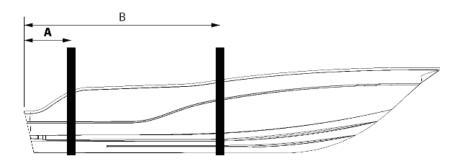
5= COCKPIT MID SHIP

6= COCKPIT AFT

7= DIVE DOOR

8= TRANSOM





A- AFT SLING LOCATION PORT AND STARBOARD

(55")

B- FORWARD SLING LOCATION PORT AND STARBOARD

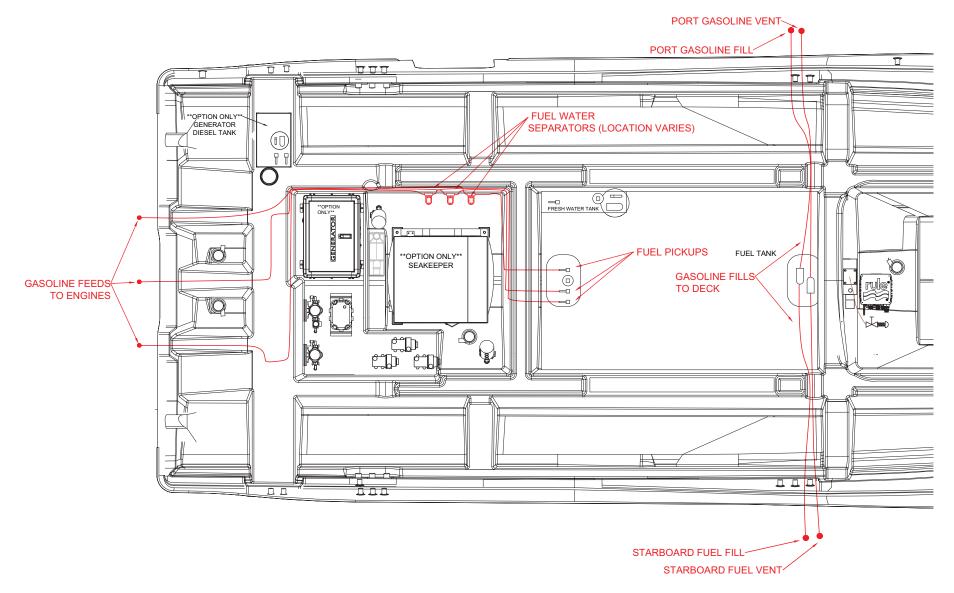
(245")






PLUMBING SCHEMATICS

FUEL SYSTEM – GAS






FUEL SYSTEM – DIESEL

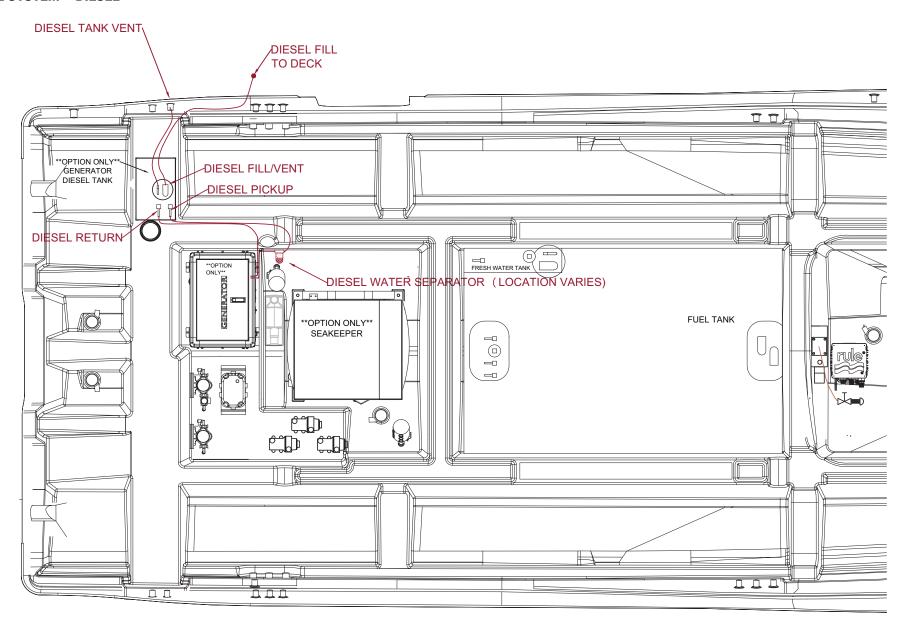




BILGE SYSTEM

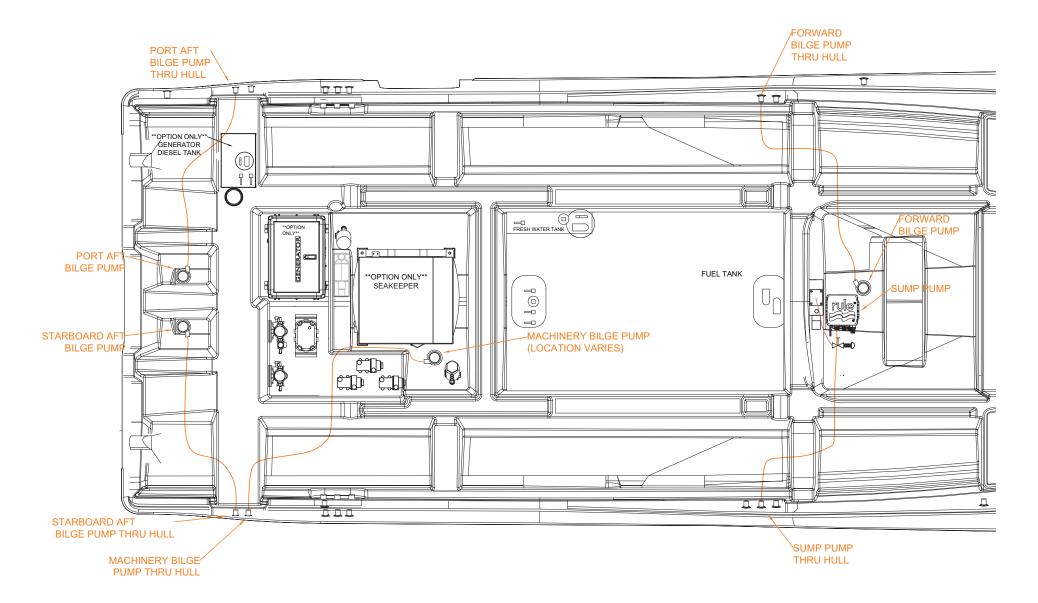




FRESH WATER SYSTEM – DECK

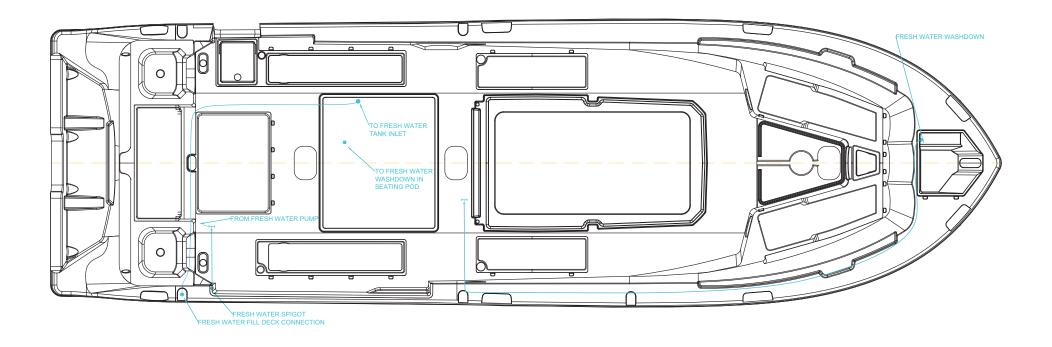




FRESH WATER SYSTEM - HULL

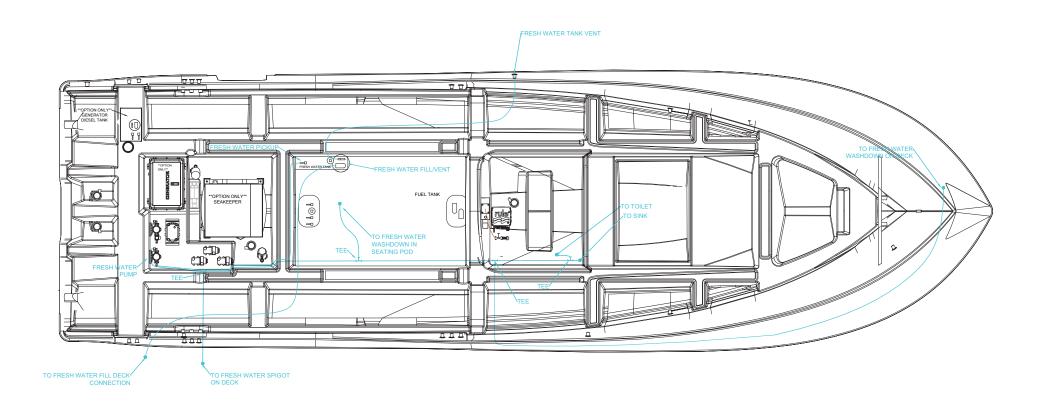




RAW WATER SYSTEM

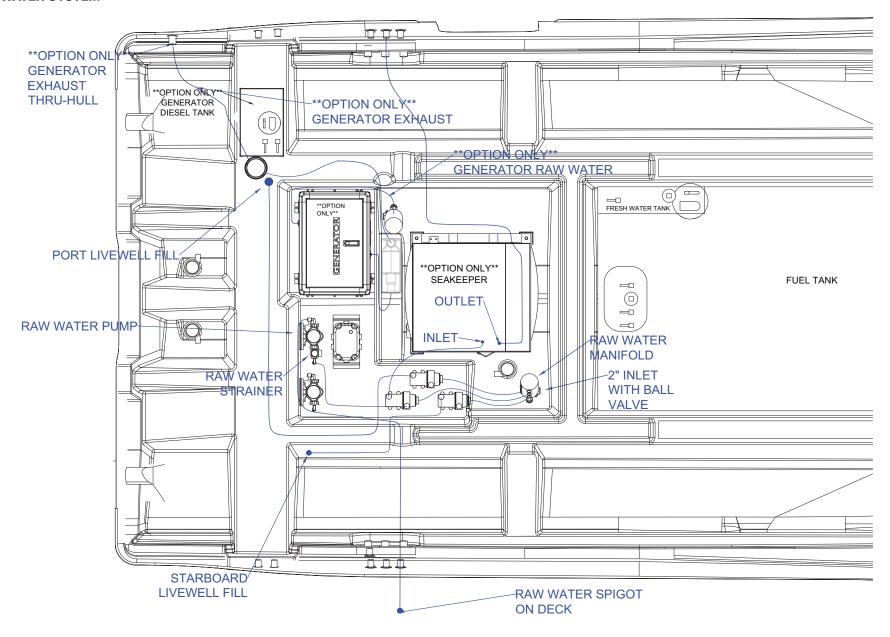




DRAINS - FORWARD

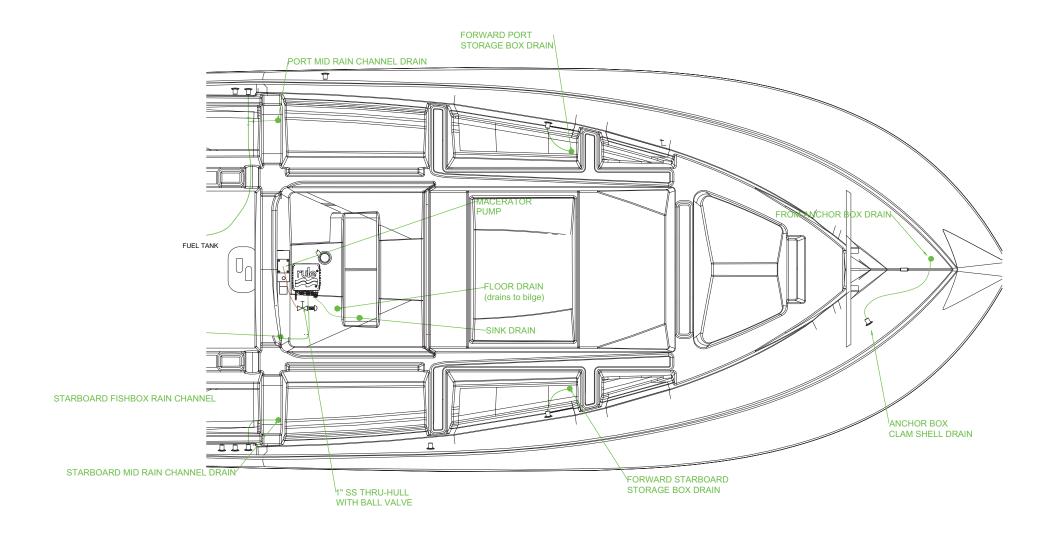




DRAINS - AFT

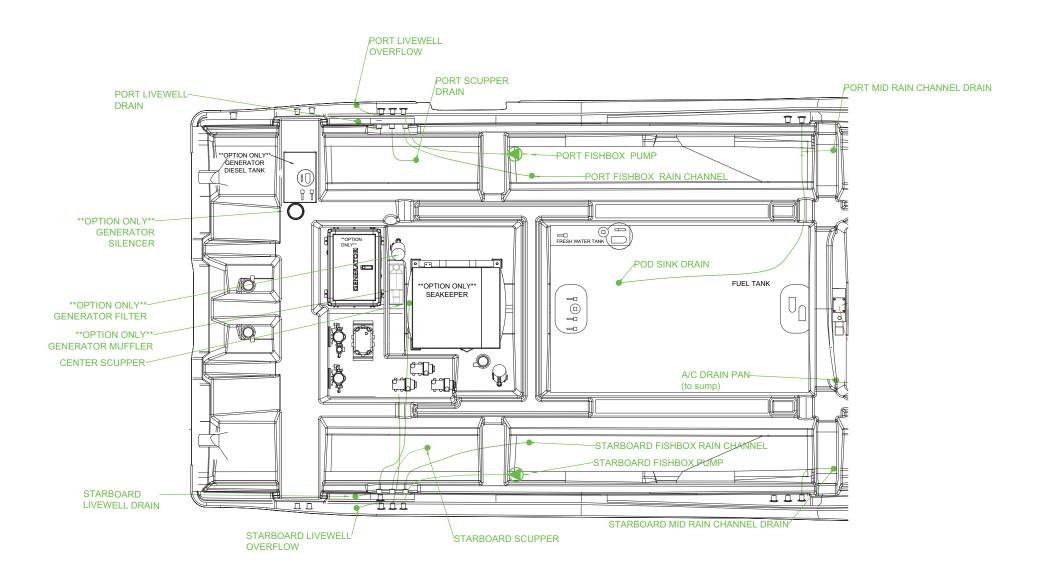




DECK PLUMBING

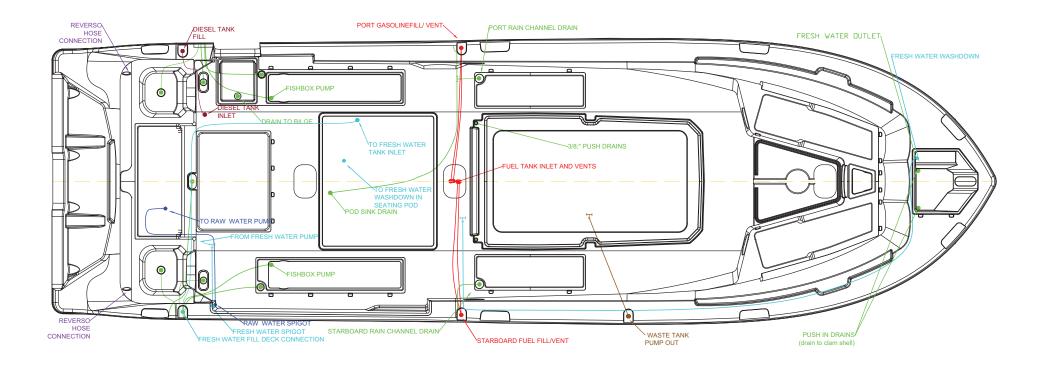




WASTE SYSTEM

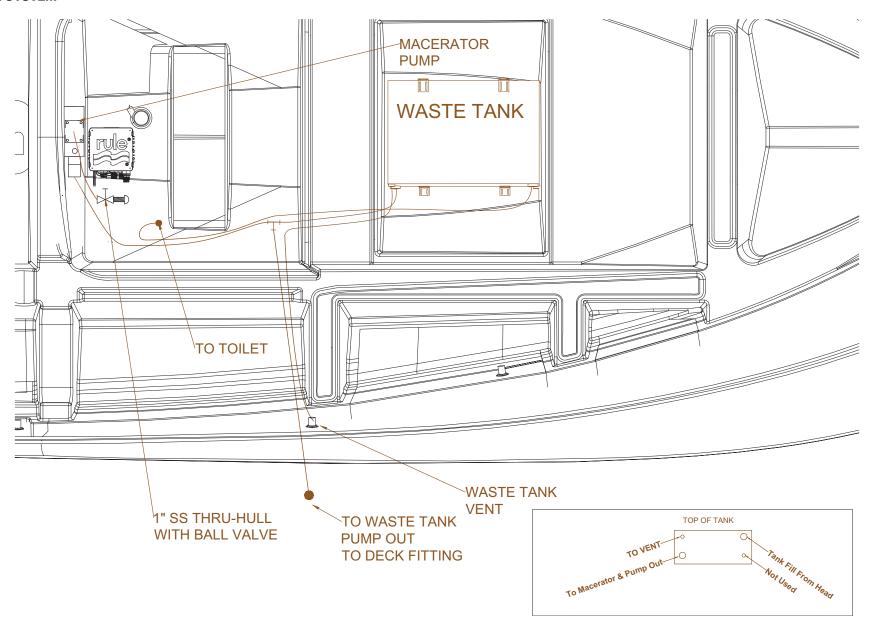




AIR CONDITIONING

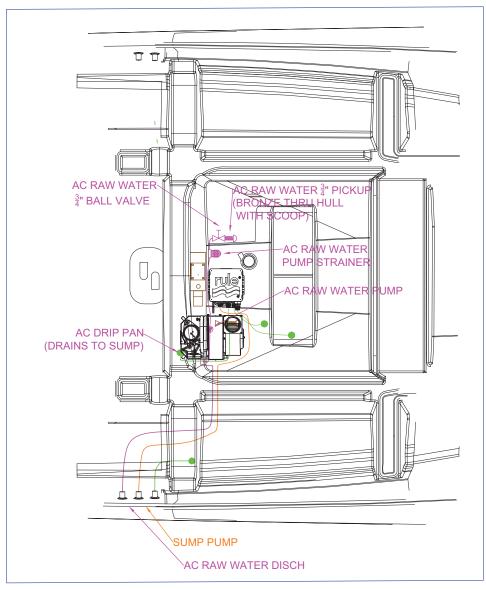


BILGE AREA BELOW CONSOLE



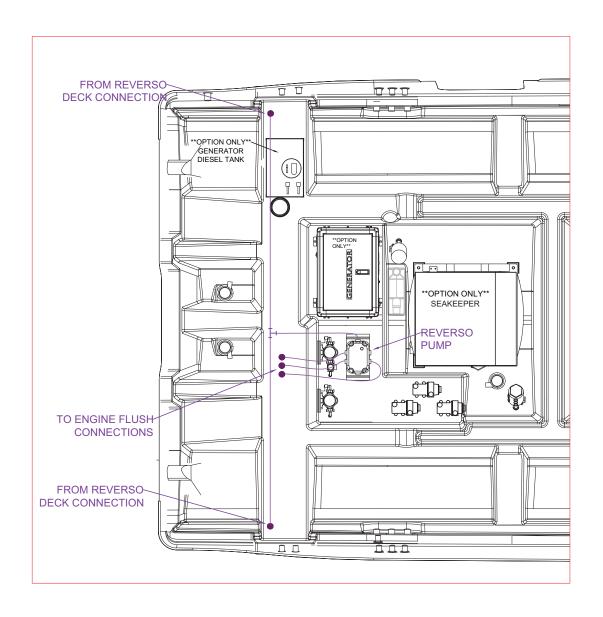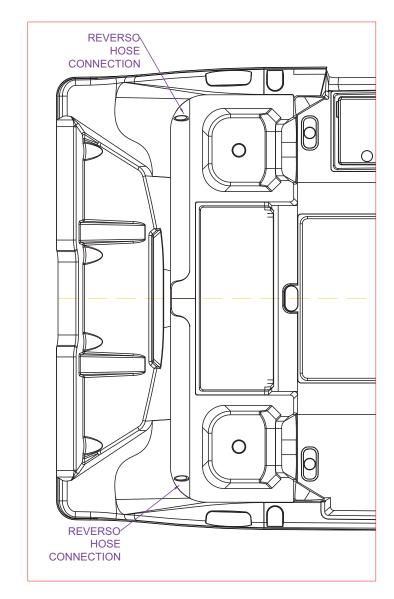REVERSO










ELECTRICAL SCHEMATICS

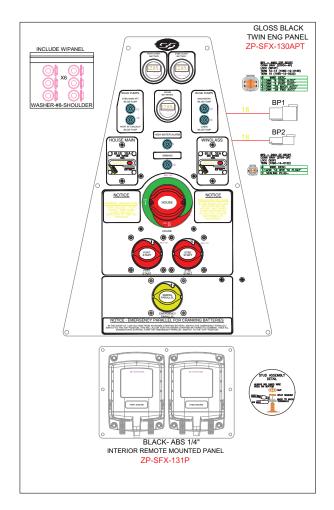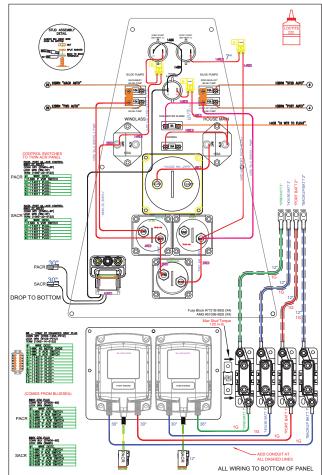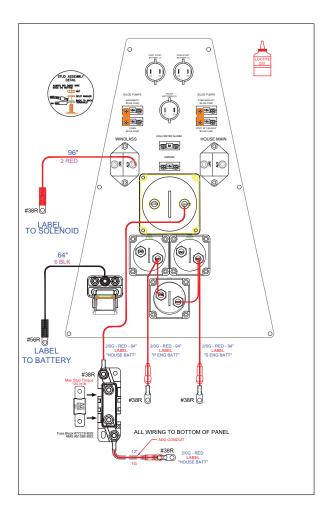SWITCH PANEL – TWIN BATTERY












SWITCH PANEL – TRIPLE BATTERY

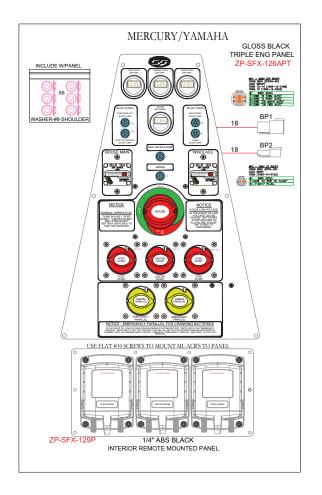


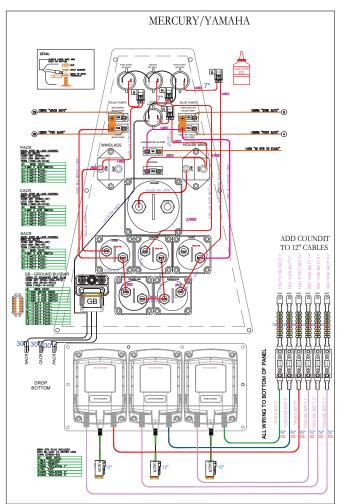

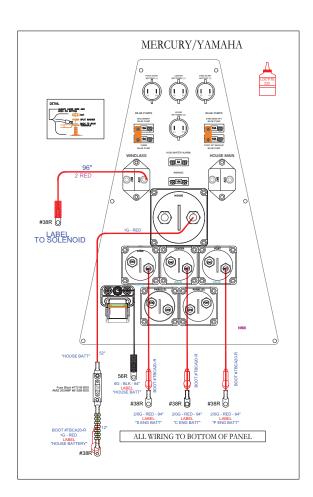




SWITCH PANEL - STBD

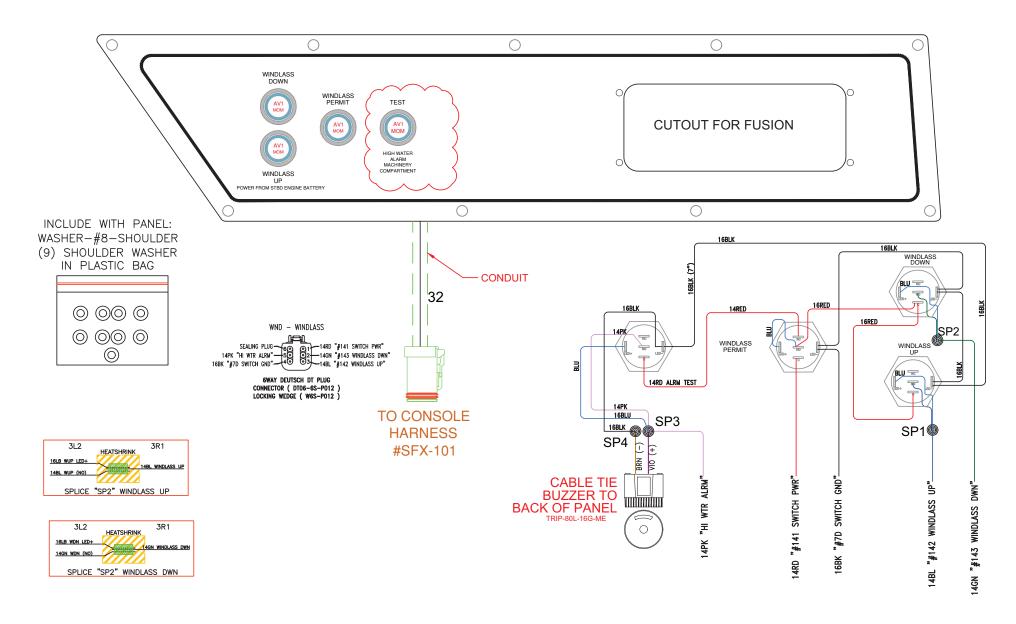




SWITCH PANEL – PORT

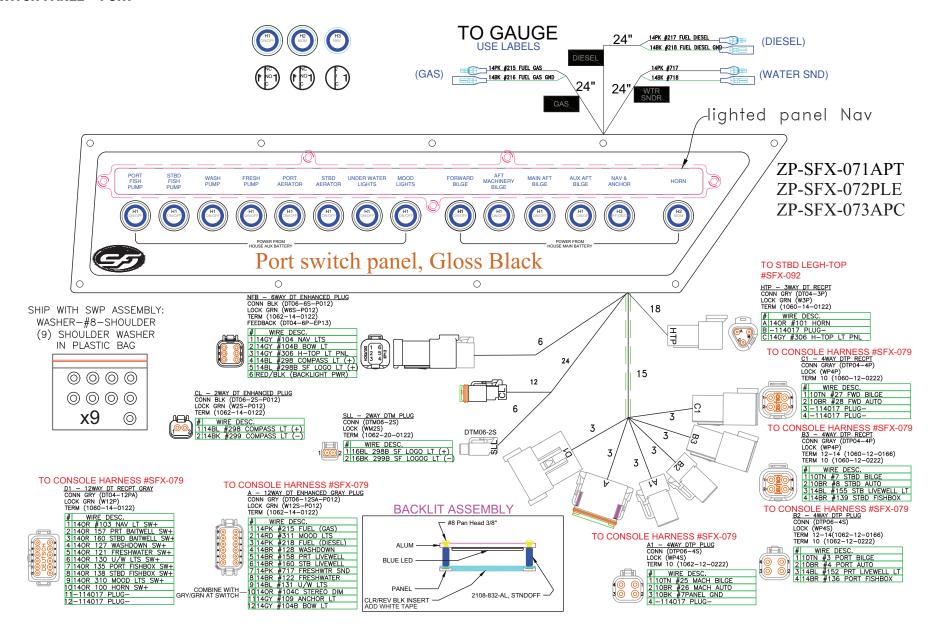




SWITCH PANEL - PORT (CONTINUED)

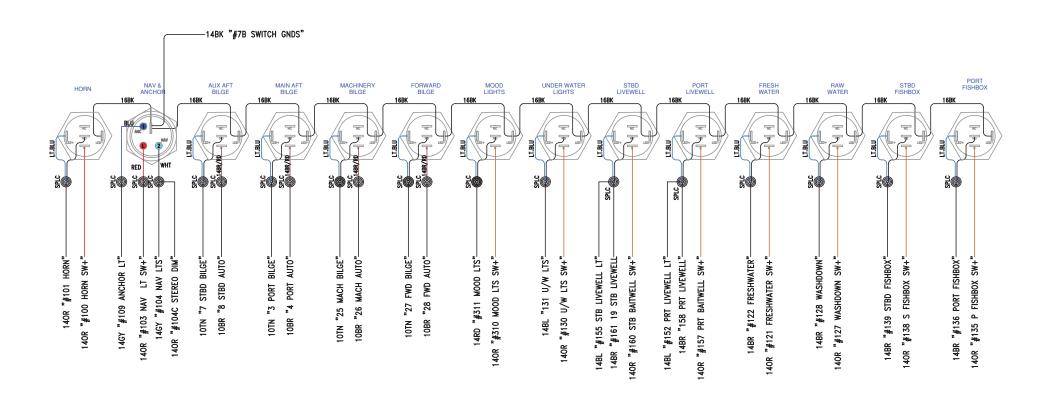




DC BREAKER PANEL

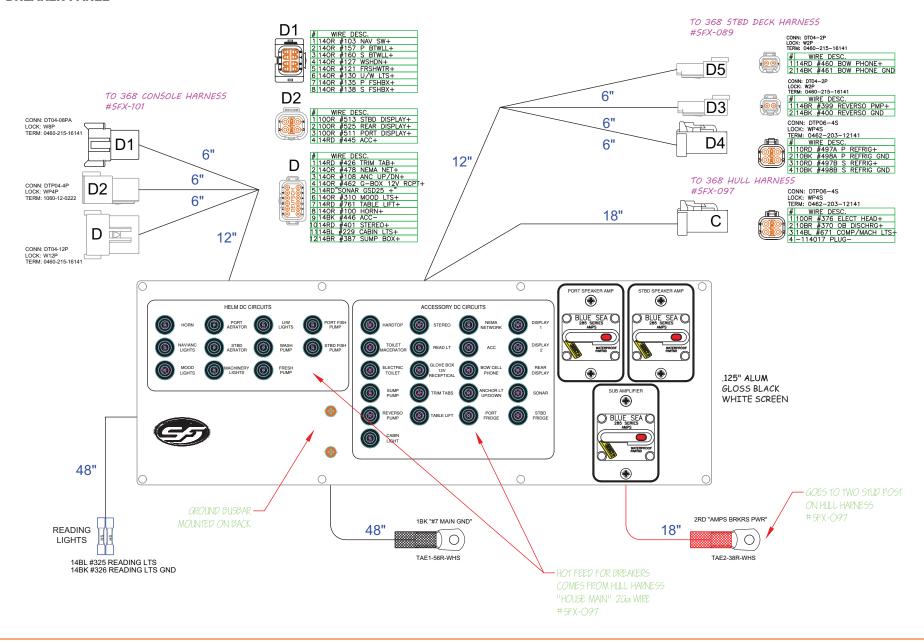




DC BREAKER PANEL (CONTINUED)

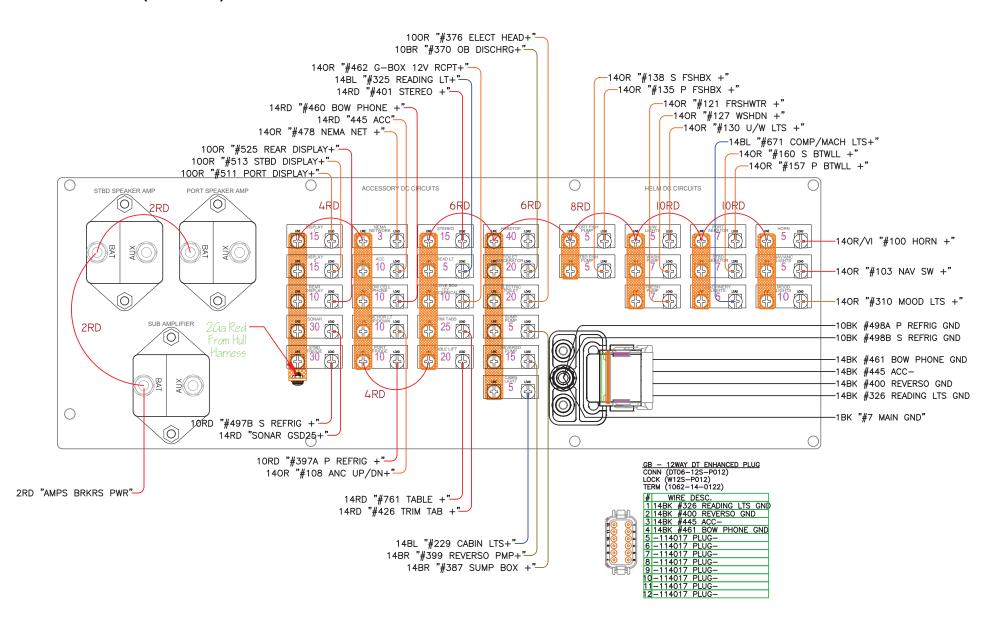




DECK HARNESS - STBD

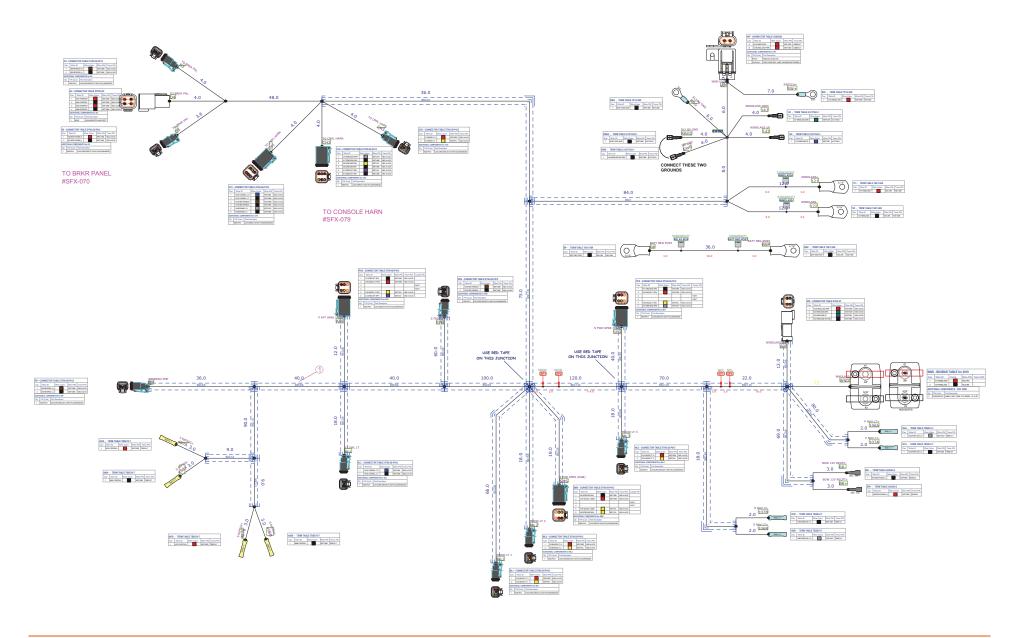




DECK HARNESS - PORT

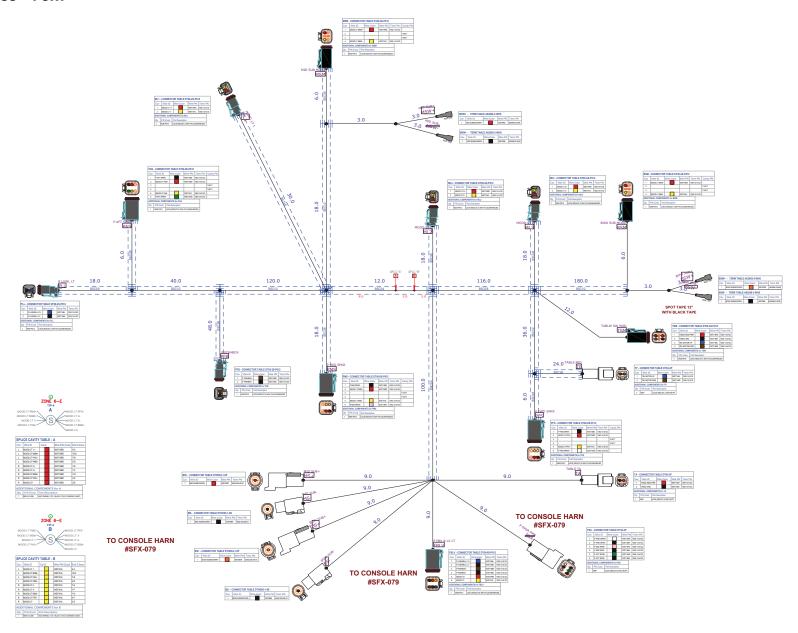




HULL HARNESS

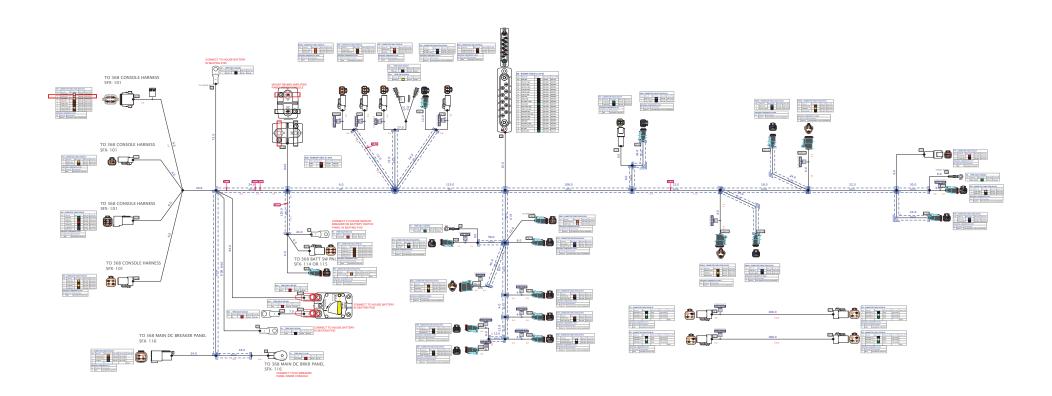




CONSOLE HARNESS

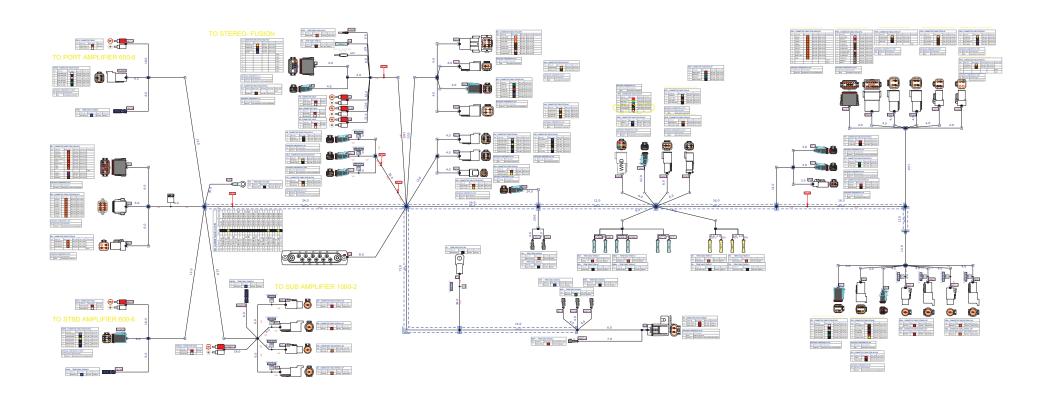

SEA DFOX


BOAT WORKS

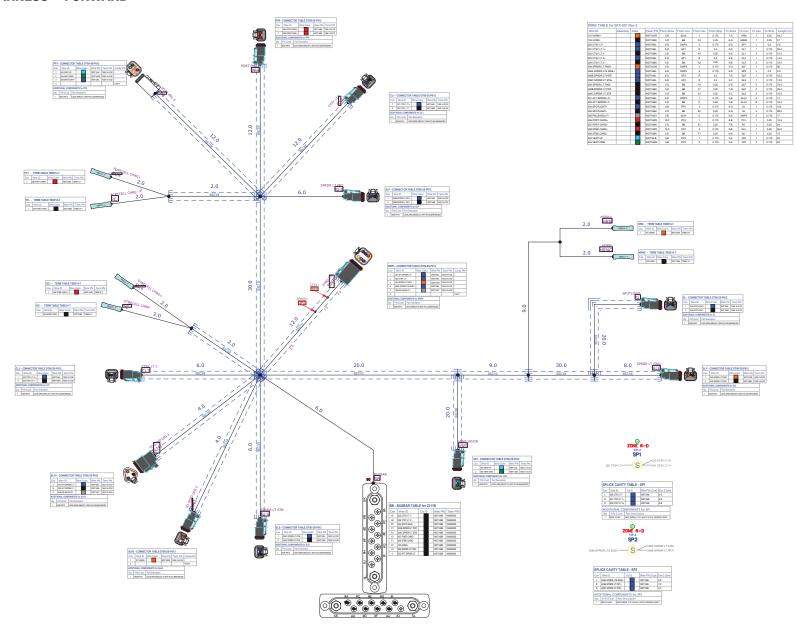HARDTOP HARNESS – FORWARD






HARDTOP HARNESS – AFT

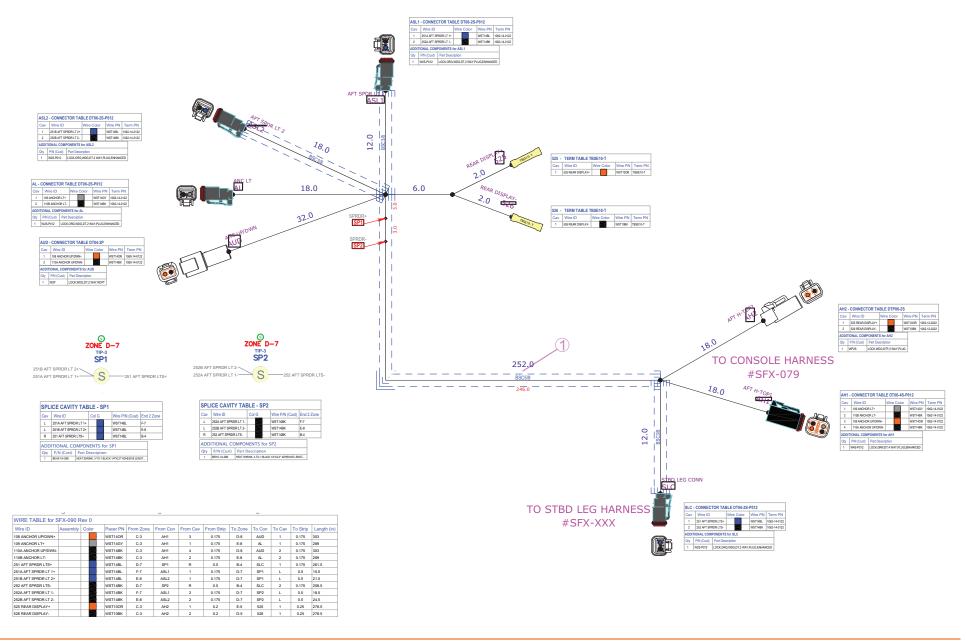

SER UFOX

BOAT WORKS

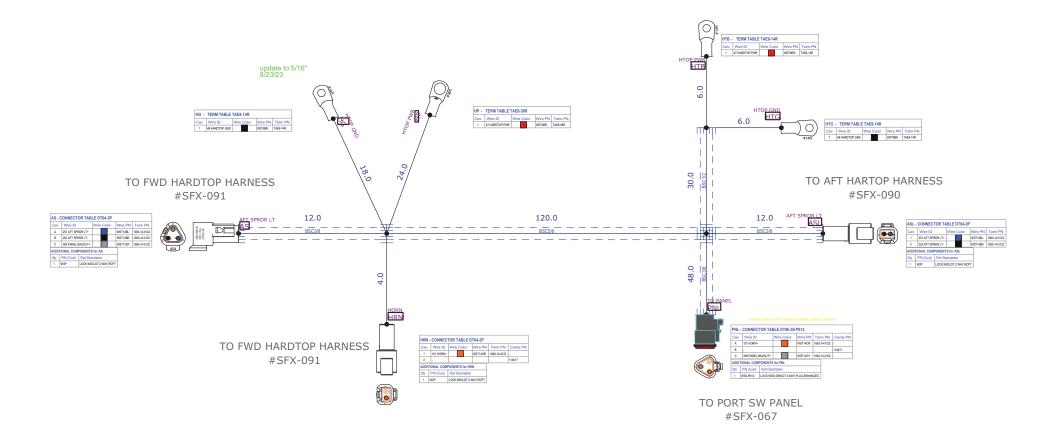
HARDTOP HARNESS - STBD



WIRE TABLE for SFX-092 Rev 0												
Wire ID	Assembly	Color	Pacer PN	From Zone	From Con	From Cav	From Strip	To Zone	To Con	To Cav	To Strip	Length (in)
47 HARDTOP PWR			WST8RD	E-7	HP	1	0.375	E-4	HTB	1	0.375	180
48 HARDTOP GND			WST8BK	E-8	HG	1	0.375	E-3	HTG	1	0.375	174
101 HORN+			WST140R	C-7	HRN	1	0.175	C-4	PNL	A	0.175	173
251 AFT SPRDR LT+		100	WST14BL	D-9	AS	A	0.175	D-3	ASL	- 1	0.175	145
252 AFT SPRDR LT-			WST14BK	D-9	AS	В	0.175	D-3	ASL	2	0.175	145
306 PANEL BACKLIT+			WST14GY	D-9	AS	С	0.175	C-4	PNL	С	0.175	181



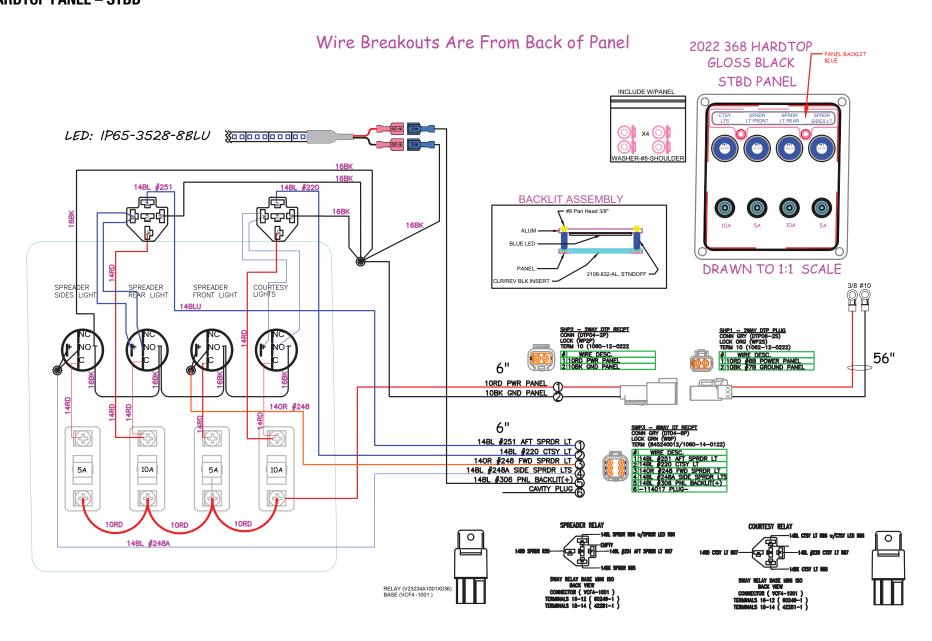
HARDTOP PANEL - STBD



SER \(\mathcal{V} \) FOX


BOAT WORKS

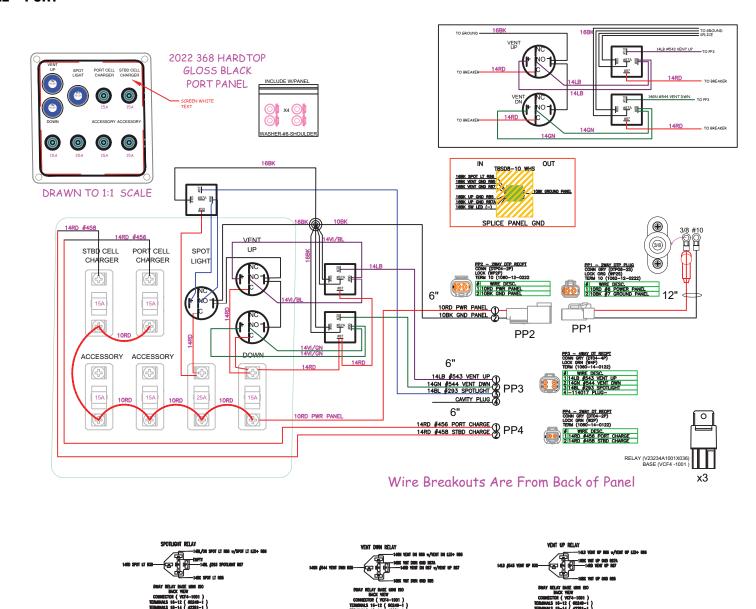
HARDTOP PANEL - PORT





POWERED ANCHOR LIGHT PANEL

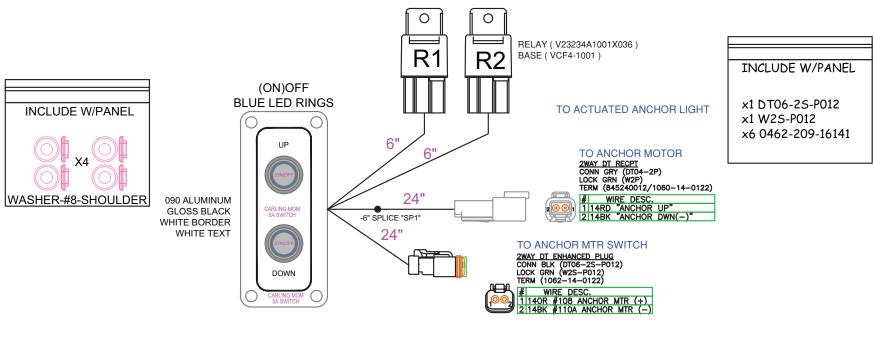

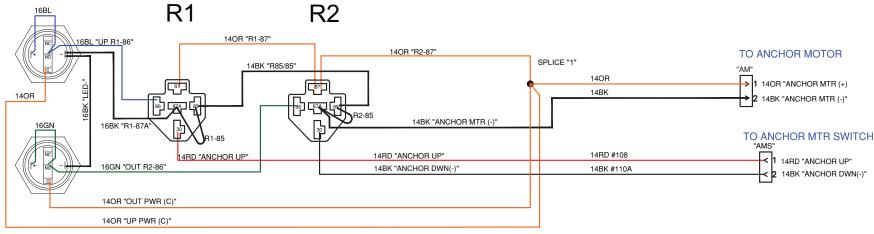

SER UFOX

BOAT WORKS

AWNING (OPTIONAL)

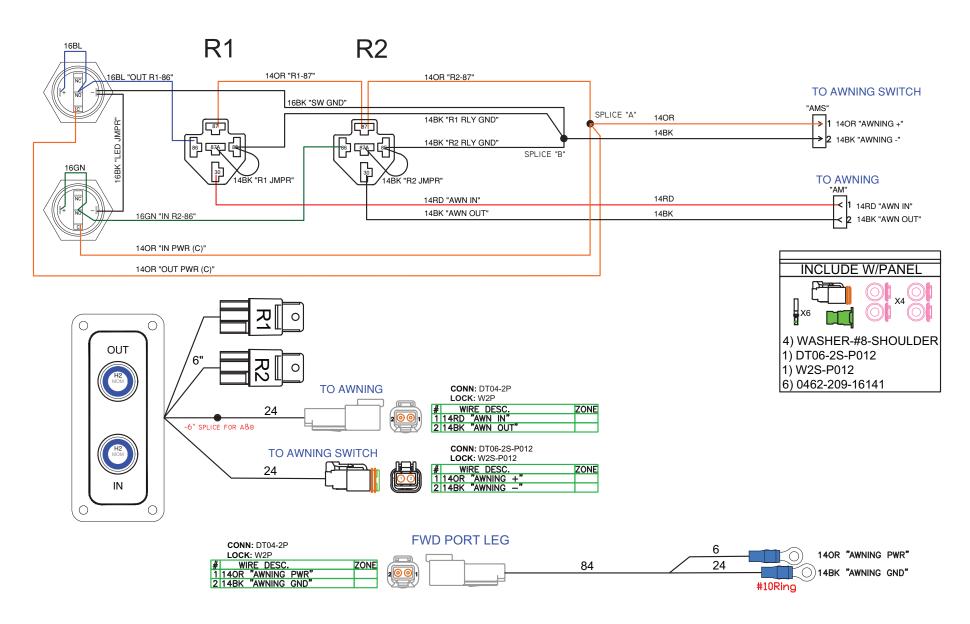




TABLE SWITCH PANEL

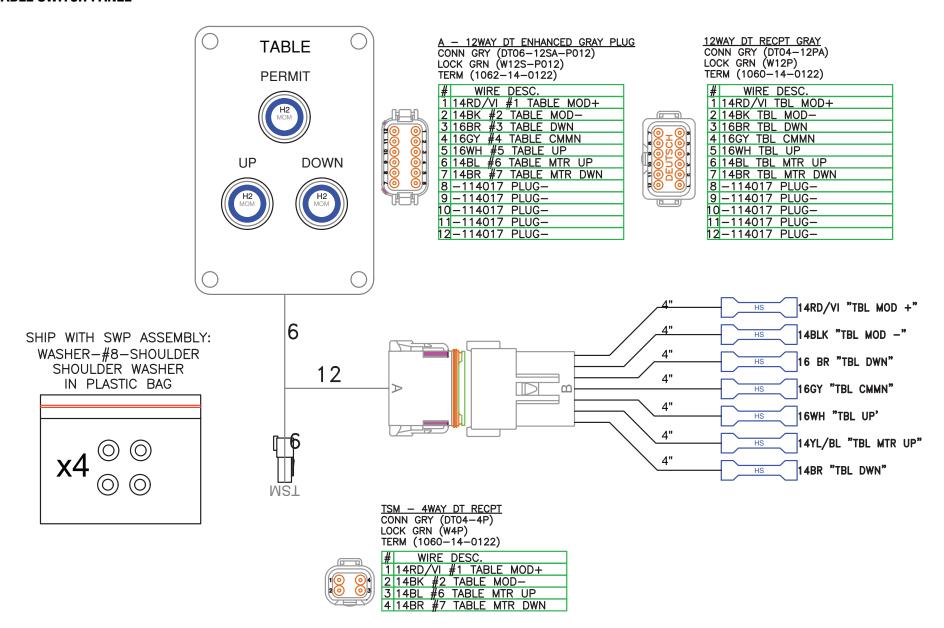
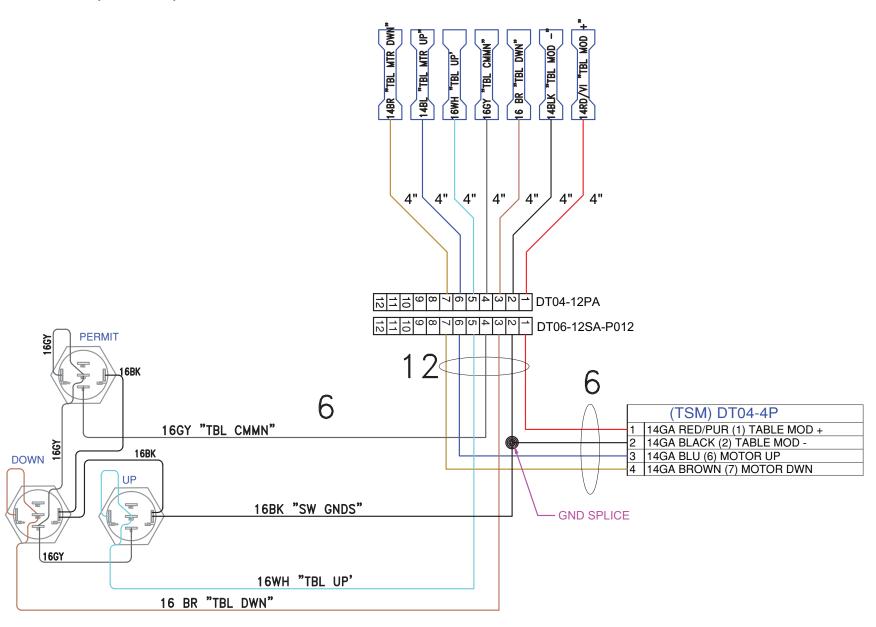


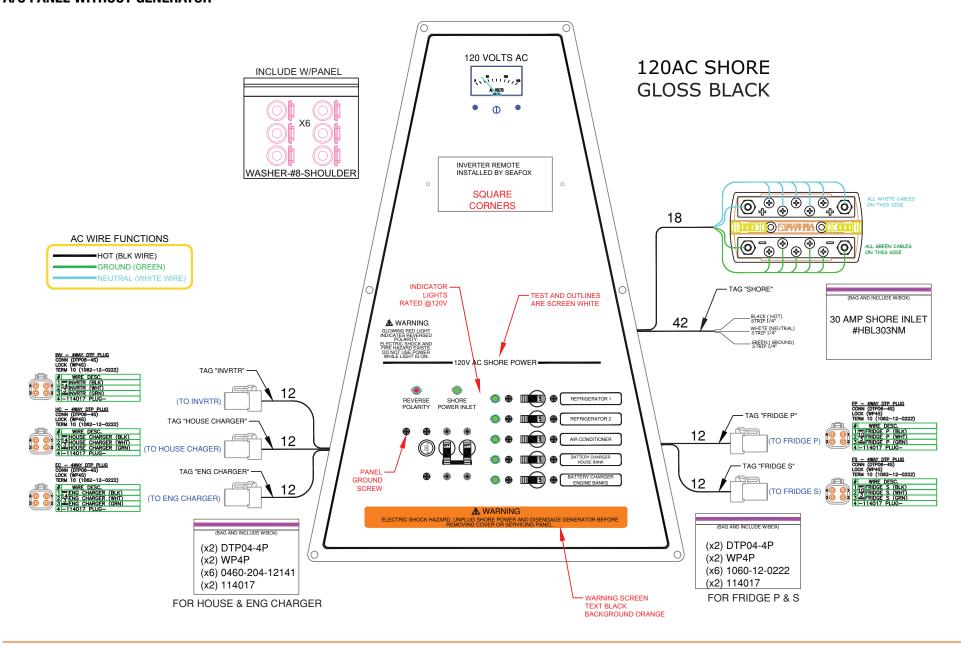


TABLE SWITCH PANEL (CONTINUED)



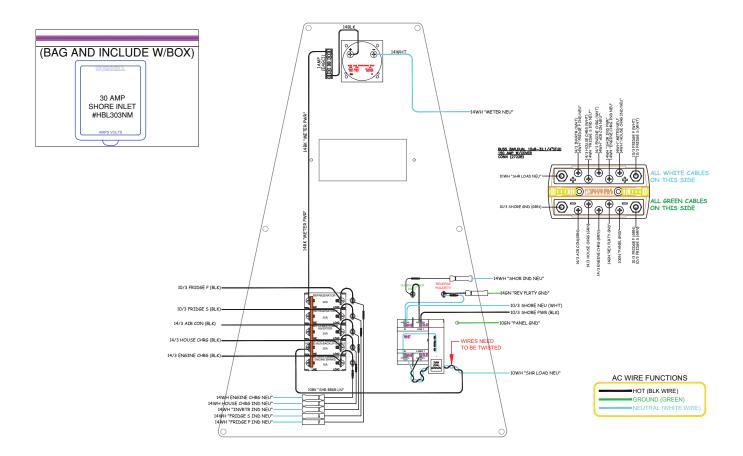


A/C PANEL WITHOUT GENERATOR





A/C PANEL WITHOUT GENERATOR (CONTINUED)




TEST INSTRUCTIONS:

- 1. Turn on the power to the panel.
- 2. Turn "ON" the ELCI/RCBO handle.
- 3. Depress the "TEST MONTHLY" button. This will cause the handle to move to the "OFF" position indicating that the ELCI/RCBO is functioning properly. If the handle fails to move to the "OFF" position the unit MUST be replaced.
- 4. Restore power by moving the ELCI/RCBO handle to the "ON" position.
- 5. This test is to be performed on a monthly basis and recorded on the "Monthly Test Reminder" label.




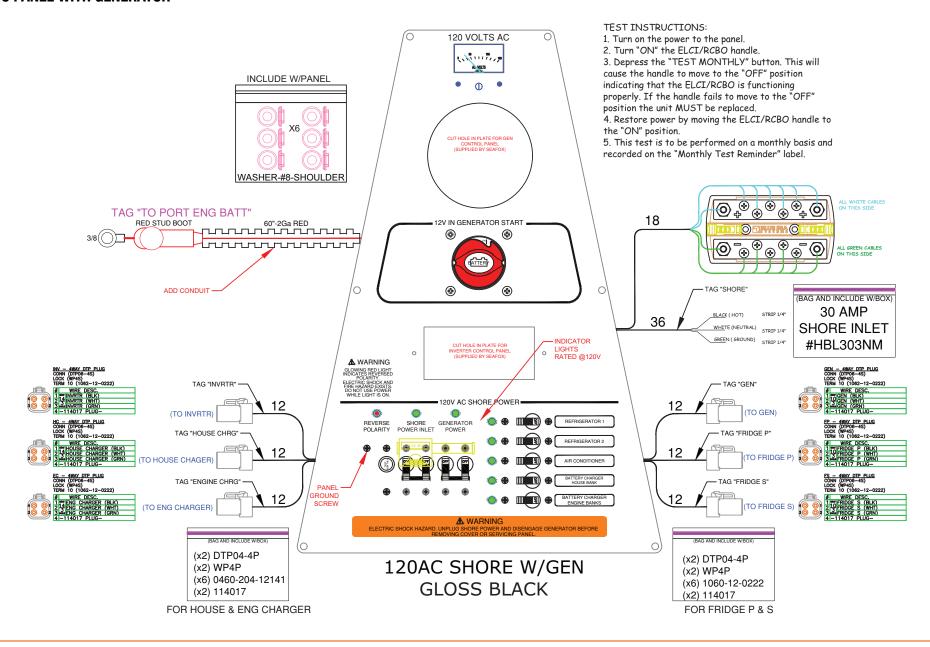A/C PANEL WITH GENERATOR






A/C PANEL WITH GENERATOR (CONTINUED)

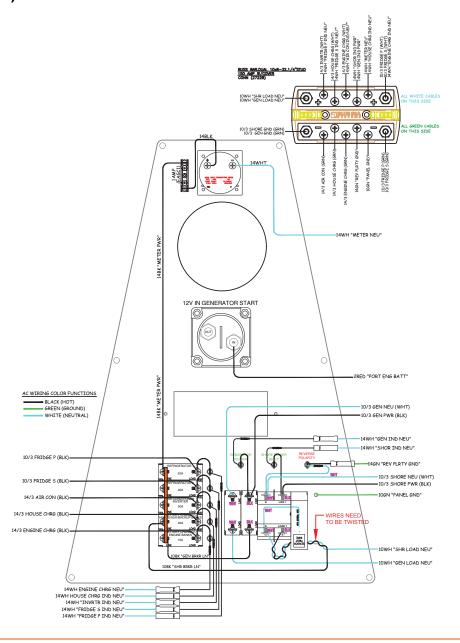




SEAKEEPER PANEL (OPTIONAL)



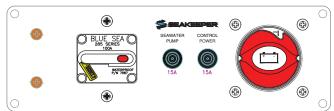


INCLUDE W/PANEL



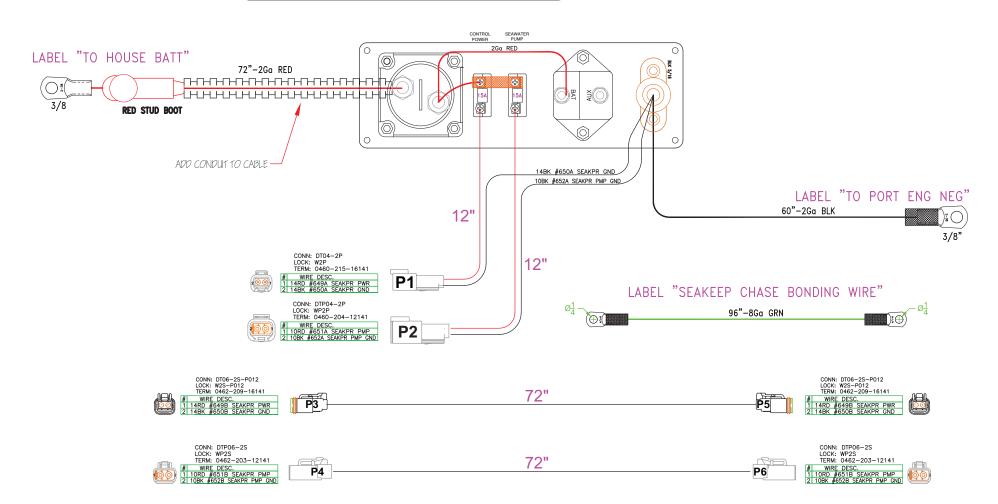




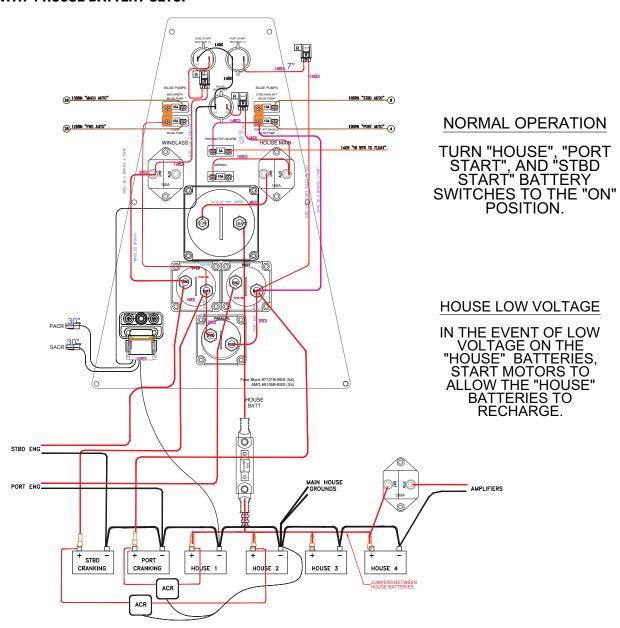BATTERY – TWIN ENGINE WITH 4 HOUSE BATTERY SETUP





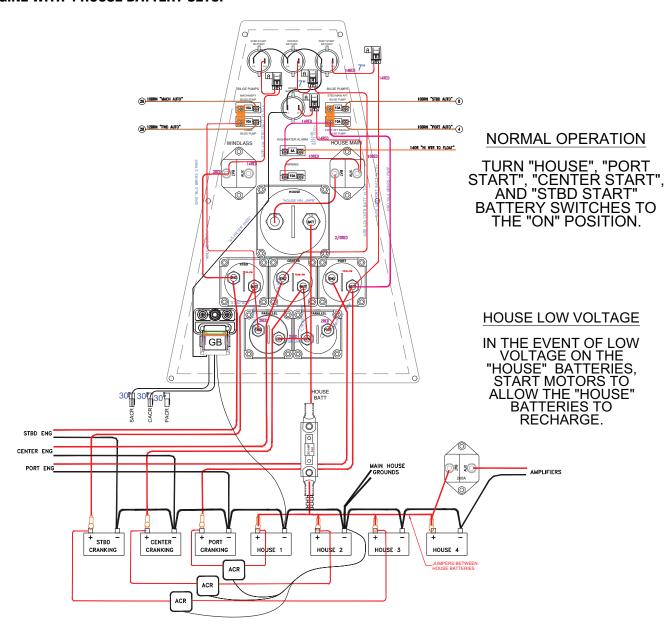BATTERY – TRIPLE ENGINE WITH 4 HOUSE BATTERY SETUP





This Page Intentionally Left Blank



Telephone: 843-761-6090 www.seafoxboats.com